

NEO-LITE SHOWER DOOR INSTALLATION INSTRUCTIONS



1. Attach **Expansion Jamb** to left and right side walls with (4) #8 x 1 1/4" screws. Note: Locate jambs 3/8" in from outside edge of shower base & wall.



2. Install left and right **Side Panels** to expansion jambs



3. Attach **Door Assembly** onto left and right **Side Panels**. (Note: door assembly is designed to "snap" onto side panel extrusions).





Attach Door Assembly to Side Panels

5. Attach **door assembly** to **side panels** with (4) #8 x 1 1/4" square drive screws per side. (Note: screws must seat into screw races securely, alignment is important).




Secure Expansion Jamb

6. Level **door assembly** if necessary. Secure **expansion jamb** to installed shower door with #8 x 3/4 self-tapping screws at middle and bottom of door, inside shower. (Note: pull side panel out at top or bottom to level door).



Install Top Cap

7. Form and press **Top Cap** onto top of shower door. Attach with (6) #6 x 3/8" self-tapping screws (Note: Standard Exact Fit Top Cap requires no extra trimming. Custom Fit Top Cap is 1/2" longer on ends and requires trim cut for custom fit).

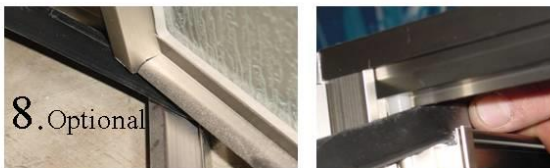

Optional

8. **Water Seal** can be easily switched to opposite end to change door swing if needed.

NEO-LITE SHOWER DOOR CAULKING INSTRUCTIONS



EXTERIOR METHOD

This method is recommended

1. Using **100% Clear Silicon Sealant** caulk the expansion jambs from top to bottom at wall to base.
2. Caulk base perimeter



INTERIOR METHOD

1. Caulk interior wall between expansion jamb and side panel.
2. Caulk base perimeter
3. Tool caulk with finger at wall
4. Caulk butt seams
5. Tool butt seams with finger



NEO-LITE SHOWER DOOR PARTS

PARTS LIST

Part#	Qty	Description
NLDA	1	Door Assembly
NLLP	1	Left Side Panel
NLRP	1	Right Side Panel
NLEJ	2	Expansion Jamb
NLTC	1	Top Cap
NLTL	1	Travel Lock
NLWS	1	Water Seal
NLSP	1	Screw Pack 16- #8 x 1 1/4" 10- *6 x 3/8"
NLDC	1	Drip Cap (Opt)

