

Pleated Door Installation Instructions

Please read these instructions before you begin.

Tools Required


Phillips screw driver, miter or hack saw

Pleated Door Includes:

- 1 - Door assembly and ball catch
- 1 - Top track
- 1 - Screw pack

A. Mount Top Track

1. Measure the distance between the left and right Jamb along the top of the door way.
2. Cut the top rail to that exact size.
3. Mount top track using on #6x1" flat head screw in the end or middle of the track (middle preferred, end shown).
4. Swing the track out to allow the door assembly to be slid into the track.

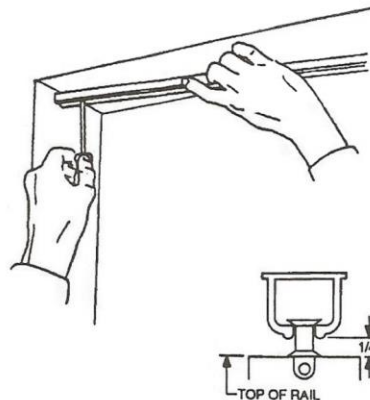


B. Mount Door Assembly

1. Slide the door into the track. Be certain to slide it in, noting which way you want it to open, left or right.
2. Complete securing the top track to the header using #6x1" flat head screws. Be certain it is straight and parallel with the edge of the door header.
3. Attach the mounting rail of the door assembly to the jamb or wall using #6x1-1/2" flat head screws through the premounted eyelet holes. Note that the top of the stationary rail should be 1/4" below the top track and it should be centered beneath.



C. Mount Ball Catch

1. Remove the ball catch from the door assembly and insert the #6x1-1/2" screw into it.
2. Drive the screw into the door jamb securing the ball catch. The strap holds the door open. Note: It is important that the ball catch is lined up evenly with its hole in the door.

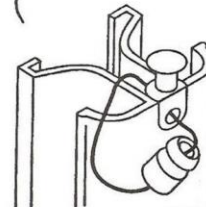


Perfecting Operation

1. Silicone spray applied to the inside of the top track will greatly enhance performance.

Shortening the door

1. If you desire to shorten the door, simply cut the side rails along the bottom to the desired length with a hack saw and the fabric of the door with scissors.
2. If you have a chop saw, you can tape the door tightly with masking tape and cut the door to shorten.

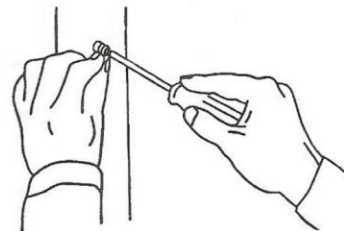

Cleaning Instructions

1. Use Ivory Soap and a wet soft cotton towel to clean the fabric. The hardware can be cleaned with any non-abrasive cleaner.